FMOUSE虎猫

FUTURA M235 PRO

使用手册

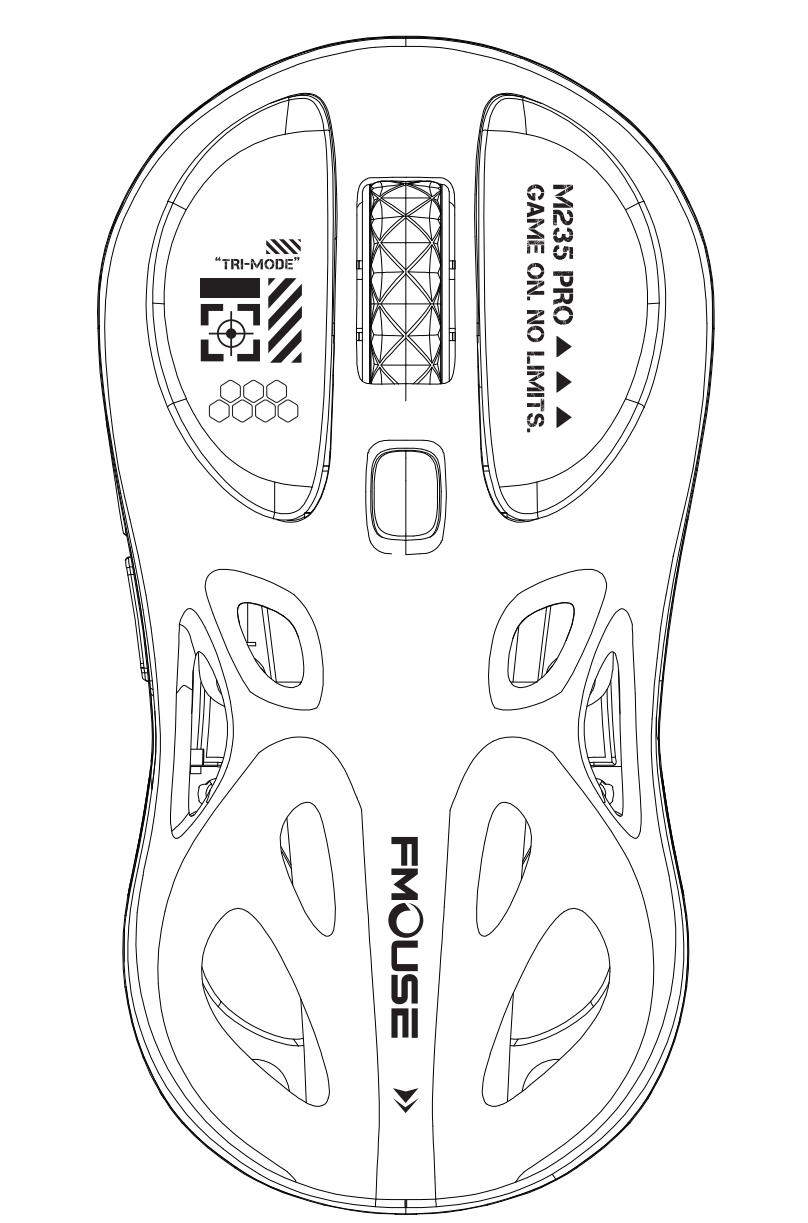

感谢您选择虎猫FUTURA M235 PRO无线游戏三模鼠标
在使用本产品前请仔细阅读好使用手册!

产品示意 Appearance of the structure

产品示意图

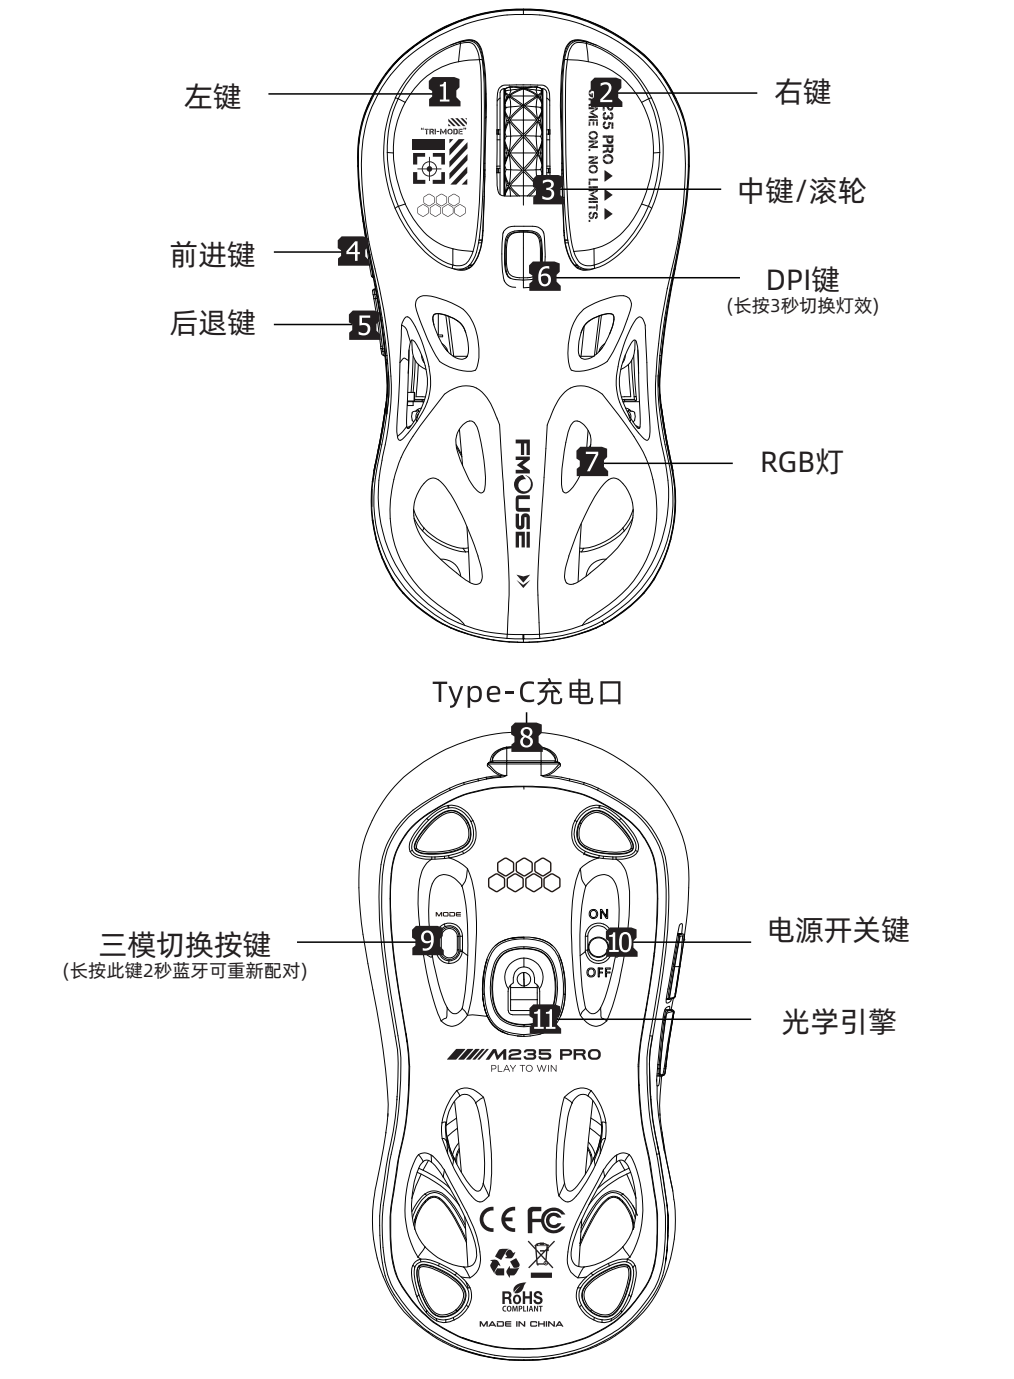

操作说明 Instructions

操作说明

USB连接

第一步：将接收器插入计算机USB端口。
第二步：将鼠标底部电源开/关键推至“ON”位置，然后点按三模切换键⑨ 切换到2.4G模式，对应灯光为绿色并闪烁、连接上设备后随即绿光熄灭，进入正常模式。
第三步：移动鼠标按压左右键即可正常使用。

蓝牙连接（蓝牙1-蓝牙2）

第一步：将鼠标底部电源开/关键推至“ON”位置，然后点按三模切换键⑨ 切换到BT1/BT2模式，对应灯光为蓝色（BT1）/红色(BT2)并闪烁，开始进入对码模式。
第二步：打开平板/电脑/手机，点击设置菜单中的“蓝牙”界面，连接配对鼠标（BT Mouse），连接上设备后随即对应灯光熄灭，进入正常模式
第三步：移动鼠标按压左右键即可正常使用。（如在蓝牙连接模式下无法搜索到蓝牙名称，可长按三模切换键 ⑨ 此时对应灯光快闪，进入蓝牙强制对码模式，选择对应蓝牙名点击连接即可）。

有线链接说明

第一步：将包装里的专用数据线的一端插在电脑上，另一端插在鼠标上
第二步：移动鼠标或按左右键即可正常使用

三模切换方式

如果鼠标连接上了三个设备，可按三模切换按键在三个设备灵活切换，对应的灯光会亮起并闪烁，随即熄灭，设备即可正常工作。

充电方式

建议使用电脑USB接口对鼠标进行充电。充电时RGB灯光 ⑦ 绿光呼吸灯效，充满时绿光常亮。

低电量提示

当鼠标快没电时，RGB灯光 ⑦ 红光闪烁报警。

组合键功能说明

1、长按左键+中键3秒=强制重新对码BT。
2、长按左键+右键+前进键+后退键（长按5秒）=恢复出厂设置（白光闪烁提示）
3、左键+中键+右键（长按3秒）=切换回报率，
切换成功灯效提示：125红-250绿-500蓝-1000紫

操作说明 Instructions

产品参数

鼠标大小	L119*W62"H33mm
产品材质	ABS
产品重量	65±5g
工作模式	有线+2.4G+BT
电池容量	500mAh
工作方式	光学技术
DPI	800-1600-2400-3200-4800
DPI灯光模式	800（红）-1600（绿）-2400（蓝）-3200（橙）-4800（紫）
灯光模式	七彩呼吸灯效

使用说明和注意事项

1、当鼠标光标移动缓慢时，请检查电池是否电量不足，建议及时充电。
2、当鼠标无法连接时，请检查鼠标底部的电源开关是否打开，并选择正确的连接方式或将USB接收器移动到其它USB端口使用。
3、如果长时间不使用鼠标，请手动关闭电源开关，以节省电源。
4、鼠标长时间不使用，会自动进入休眠模式，移动鼠标或按任意键唤醒鼠标。
5、请勿拆卸或试图修复本产品，因为这样做可能导致损伤。

高手殿堂 Advanced application

驱动安装与使用

1.在浏览器输入**www.fmouse.com**进入官网，在下载中心下载**FMOUSE Futura Setup**鼠标驱动，根据电脑系统选择下载驱动。
2.下载完成后解压压缩包找到文件**FMOUSE Futura Setup**点击此文件根据提示进行安装。
3.安装完成后打开驱动使用数据线连接电脑与鼠标即可对鼠标进行设置。

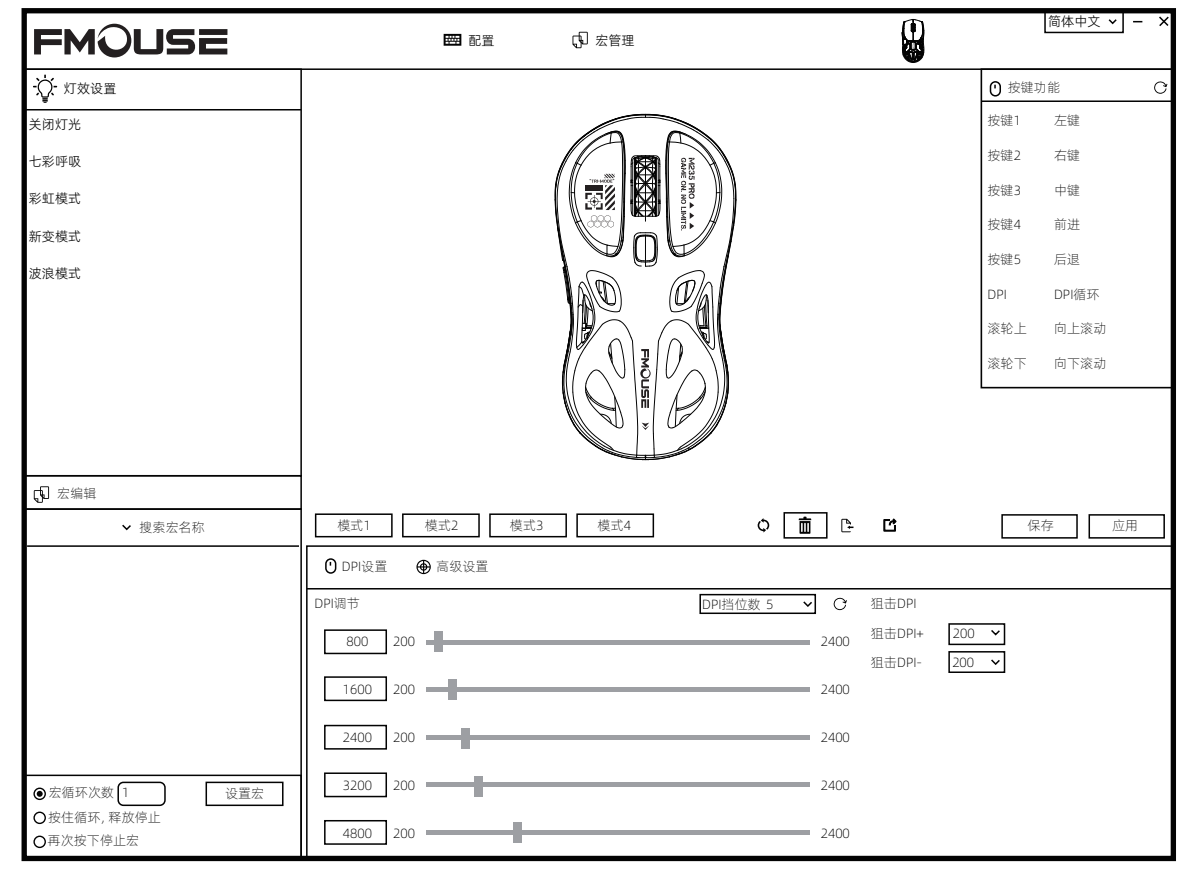

按键1 左键
按键2 右键
按键3 中键
按键4 前进
按键5 后退
DPI DPI循环
滚轮上 向上滚动
滚轮下 向下滚动

宏循环次数 1

DPI挡位数 5

800 200 2400
1600 200 2400
2400 200 2400
3200 200 2400
4800 200 2400

狙击DPI+ 200
狙击DPI- 200

产品指南 Product Guide

请在使用产品之前阅读手册 ⚠ ⚠

电池使用警告! 电池如果更换不当，则可能存在泄漏或爆炸及造成人身伤害的危险。如果替换为错误的电池类型，可能有引起火灾或爆炸的风险。请参照所附说明，确保电池的正确安装。可充电电池如果处置不当，则可能存在火灾或化学烧伤的危险。切勿拆卸或将电池与导电材料、液体接触、或暴露于温度超过54℃（130° F）的坏境中。处于极低气压下的电池可能会导致爆炸或者易燃液体或气体泄漏。切勿在电池出现泄漏、变色、变形或出现任何其它异常的情况下使用或充电。不要让电池长时间处于放电或不使用的状态。切勿短路。您的设备可能包含内置可充电电池，此电池不可更换。电池寿命随使用情况而异。已报废电池应当依据当地法律进行弃置。如果没有相关法律或法规，请将您的设备丢弃在用于电子设备的垃圾桶中。应将电池放置于远离儿童的地方。
1类激光产品： 本产品符合国际标准IEC/EN60825-1：2014，1类激光产品规定，同时符合21 CFR 1040.10规定，IEC 60825-1 Ed.3.除外，如2019年5月8日发布的第56号Laser Notice（激光公告）中所述。最大功率716微瓦CW，发射波长832-865纳米；工作温度在0℃-40℃。
警告! 如果不按照此处指定的程序进行控制、调整或操作、则可能导致辐射伤害。
警告! 请避免长时间直接以眼睛和/或皮肤接触激光光圈。可能导致烧伤。
本产品包含1类LED。 操作温度在0℃至40℃之间
1M类激光产品： 本设备符合国际标准IEC/EN60825-1：2014，1M类激光产品的相关要求，同时符合21CFR 1040.10的要求，IEC 60825-1Ed.3.除外，如2019年5月8日发布的第56号Laser Notice（激光公告）中所述。不可见红外光放射至少+/-2°的辐散光束；最大功率为1.4微瓦的连续波，放射的波长范围832-865纳米；操作温度0℃至40℃。
警告! 激光辐射。使用光学放大仪器在100毫米距离内查看激光输出可能造成眼睛伤害。

使用指南-安全正确地使用产品：

-除电池移除和更换外，请勿自行拆卸或改装产品。
-请勿拆卸或尝试维修本产品，因为这样做可能会导致辐射伤害。
-请勿将红外/激光光束指向任何人的眼睛或反射物体。
-请勿将产品浸入任何液体中、或暴露在炎热或潮湿的环境中。
-如果将产品暴露于超出既定温度范围的环境中，则切断电源设备，直至温度在指定的操作温度范围内达到稳定。
-本产品仅可使用随附的电源。不得改装电源。不得在雷雨天气时为产品充电。
-使用此产品请搭配所列出/认证的ITE电脑和附件。
-此产品不适合儿童使用，14岁以下儿童为非预期用户。
-如果使用产品长时间重复单一动作，则可能导致手部、手腕、胳膊、肩部、颈部或背部的神经、肌腱或肌肉损伤。如果存在疼痛、麻木、酸软无力、肿胀、灼痛、抽筋或僵硬等症状，请向合格的专业保健人士咨询。
-在正常和合理可预见的操作条件下，本产品不存在安全隐患。如果产品运行不正常，请致电支持人员。如需任何服务或维修，请务必将产品送回相关部门。
-未经明确批准而对本产品进行的任何改装或改造都将导致用户丧失操作本设备的权利和产品保修失效。

♻ 电池、电子设备和电气设备不应与生活垃圾一同处理。只要情况允许，应将其隔离并带到适当的收集点，以便回收利用，并避免对环境和人类健康的潜在影响。欲了解更多信息，请联系当地主管部门或购买地点。

产品售后 Service

产品售后指南

1、购买产品，在7天内出现质量问题

用户可以选择
1、前往购买产品的经销商处，要求全额退款。
2、前往购买产品的经销商处更换同型号产品。
3、前往授权的服务中心进行维修或更换。

2、购买产品，在15天内出现产品质量问题

用户可以选择
1、前往购买产品的经销商处更换同型号产品。
2、前往授权的服务中心进行维修或更换。

3、购买产品，超过15天但仍在质保期内产品出现质量问题

用户可以选择
1、前往授权的服务中心进行维修或更换.处理流程为：在我们工作人员的指导下写用户信息注册单，等待我们的工程师为您检测、维修或更换产品。
2、如果本地没有授权的服务中心，用户需自行邮寄产品至邻近的服务中心，邮寄用自理，我们的工作人员在收到您邮寄的产品后会尽快和您联系，并检测、维或更换产品，返程邮寄费由虎猫公司承担。

4、有限质保申明

公司对其产品包装内所有的硬件产品，在符合公司三包条件下予以三包服务。此服务仅限于出现质量问题的产品，而不包括赔偿购买者利益损失及其他意外情况造成的任何直接或间接损失。

5、属以下情况之一的产品，不提供三包服务

1、不能出示产品有效三包凭证和有效原始购物发票或收据，同时产品原序列号标签有涂改、替换、撕毁的现象。
2、产品超出公司规定的三包期限。
3、未依据产品使用说明书或未依据说明书所指示的电脑工作环境使用、维护、保管所导致的故障和损失；以及由非公司授权机构的维修人员安装，修理、更改或拆卸而造成的故障或损坏。

产品质保 Product Quality Assurance Card

产品质保卡

请填写下列信息，并加盖销售单位公章

用户档案： ____年____月____日

用户名称			
通讯地址			
联系电话		邮　　编	
购买地址			
购买价格		销售单号	
经销商签名		用户签名	

如需下载驱动，请联系经销商索取！

本卡内容不得擅自涂改
并请保存产品包装盒，以维护您的合法权益.
This card content shall not alter, and please keep the product packaging box, the maintenance of the legitimate rights and interests of you.

合格证
CERTIFICATE

产地：中国.深圳
Made in China

FMOUSE虎猫

FUTURA M235 PRO

Instruction Manual

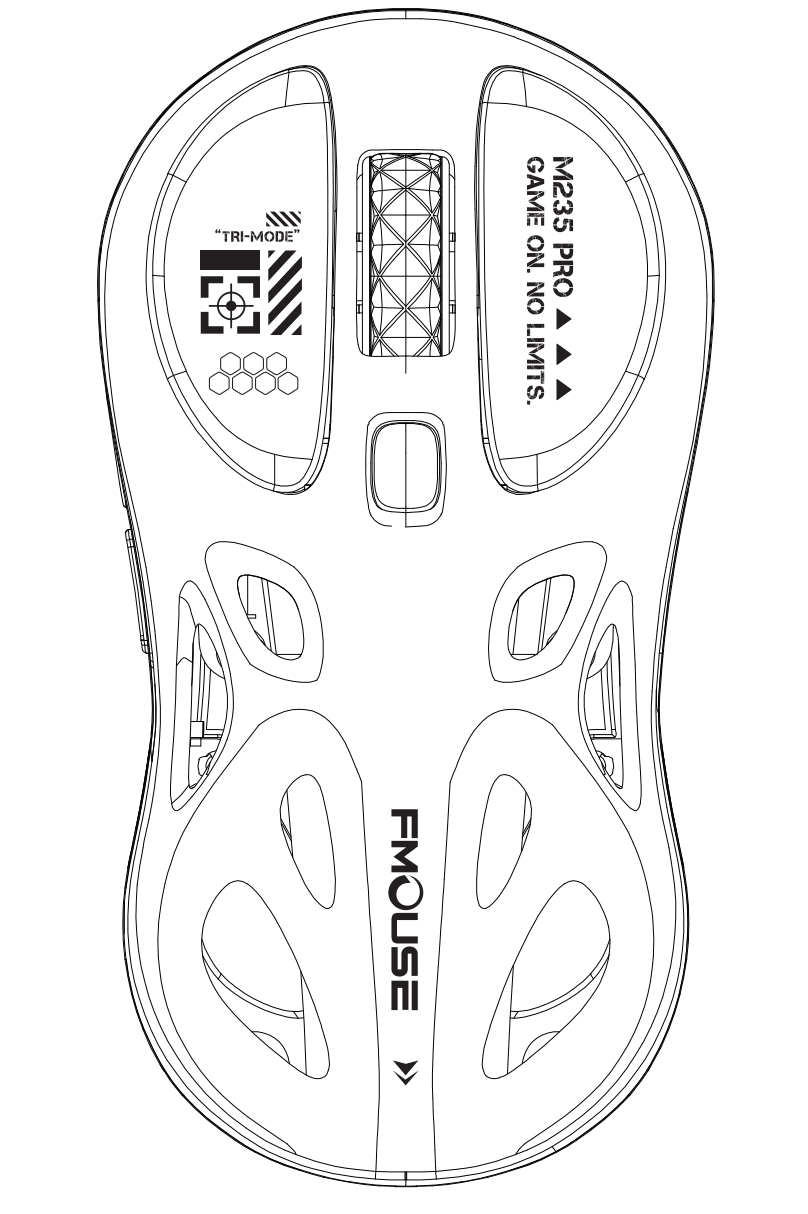

Thank you for choosing FUTURA M235 PRO Gaming Mouse.
Please read the manual carefully before using this product.

Appearance of the structure

Product Function Diagram

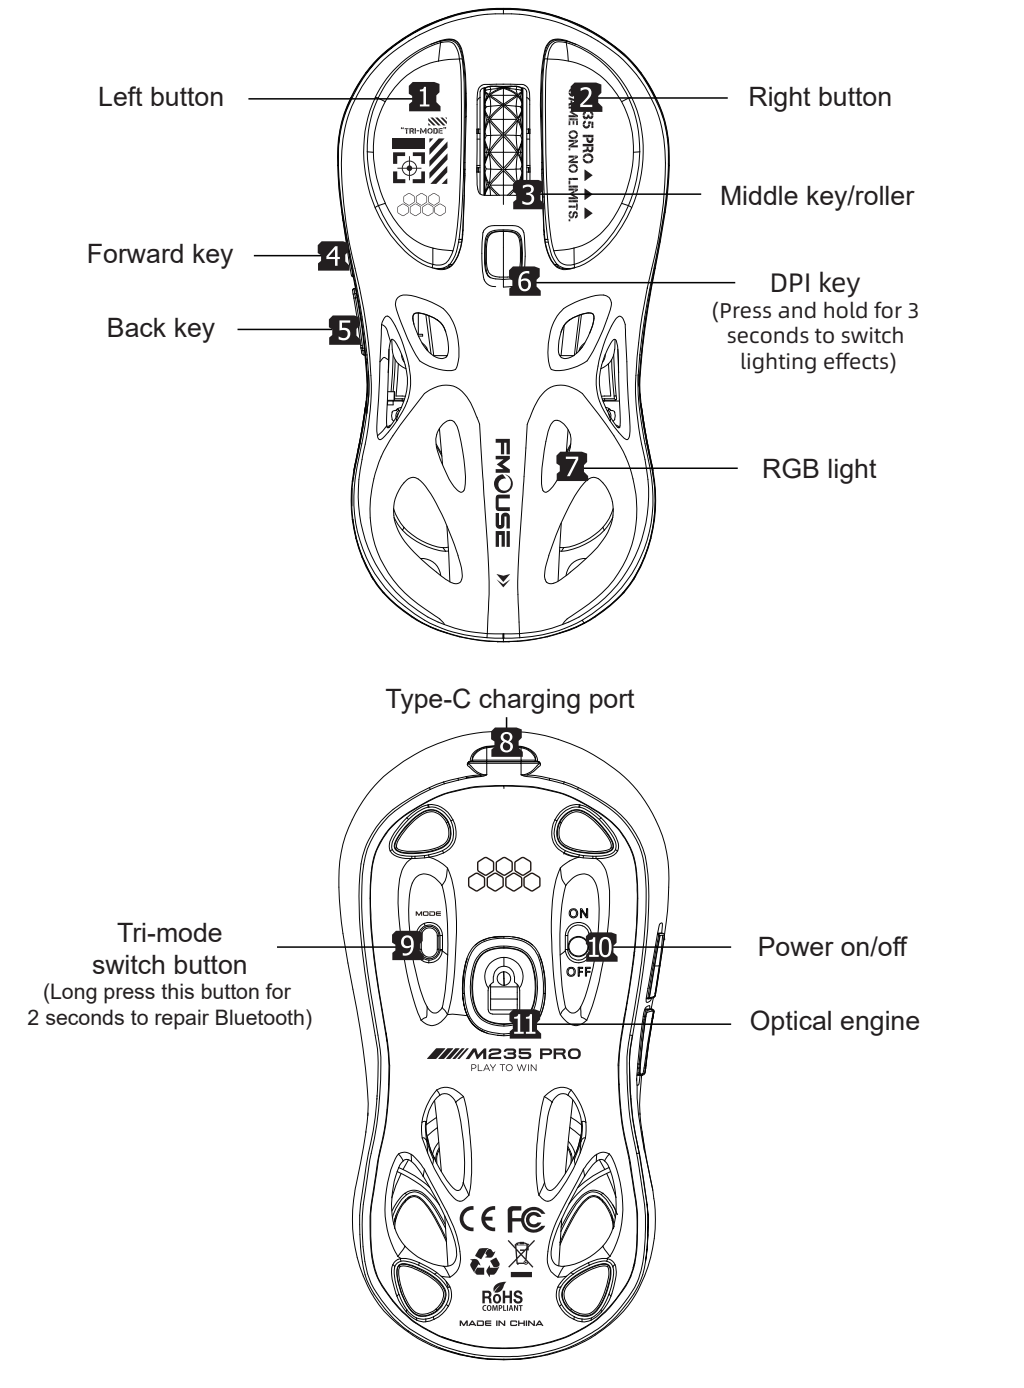

Instruction

Operation Instructions

USB connection

Step 1: Insert the receiver into the USB port of your computer.
Step 2: Push the power on/off switch at the bottom of the mouse to the "ON" position, then press the Tri-mode switch button ⑨ to switch to 2.4G mode. The corresponding light will be green and flashing. After the device is connected, the green light will go out immediately and enter the normal mode.
Step 3: Move the mouse or press the left and right buttons to use it normally.

Bluetooth connection (BT1 / BT2)

Step 1: Push the power on/off button at the bottom of the mouse to the "ON" position, then press the Tri-mode switch button ⑨ to switch to BT1/BT2 mode. The corresponding light will flash in blue (BT1) or red (BT2), indicating that it has entered the pairing mode.
Step 2: Turn on your tablet/computer/phone, go to the "Bluetooth" interface in the settings menu, and connect to the mouse (BT Mouse). Once the device is connected, the corresponding light will turn off and it will enter the the normal mode.
Step 3: Move the mouse or press the left and right buttons to use it normally. (If you cannot find the Bluetooth name in the Bluetooth connection mode, hold down the Tri-mode switch button ⑨. The corresponding light will flash rapidly, entering the Bluetooth forced pairing mode. Select the corresponding Bluetooth name and click to connect).

Wired Connection

Step 1: Insert one end of the dedicated charging cable included in the package into your computer and the other end into the mouse.
Step 2: Move the mouse or press the left and right buttons to use it normally.

Tri-mode switching method

If the mouse is connected to three devices, you can press the Tri-mode switch button to flexibly switch among the three devices.
The corresponding light will light up and flash, then go out, and the device can work normally.

Battery Warning

It is recommended to use the computer USB interface to charge the mouse. During charging, the RGB lights ⑦ will show a breathing green light effect. When fully charged,the green light will remain on constantly.

Low Battery Alert

When the mouse is running out of power, the RGB light ⑦ flashes red as an alarm.

Instruction

Combination Key Function Description

1. Long press the left button + middle button for 3 seconds = Force re-calibration of BT.
2. Long press the left button + right button + forward button + backward button (long press for 5 seconds) = Restore factory settings (white light flashing indicates success).
3. Left button + middle button + right button (long press for 3 seconds) = Switch return rate. Successful switch effect indication: 125 red - 250 green - 500 blue - 1000 purple

Product parameters

Mouse size	L119*W62*H33mm
Product material	ABS
Product Weight	65±5g
Working mode	Wired+2.4G+BT
Battery capacity	500mAh
Working range	Optical technology
DPI	800-1600-2400-3200-4800
DPI light mode	800 (red) - 1600 (green) - 2400 (blue) - 3200 (orange) - 4800 (purple）
Light mode	Colorful breathing light effect

Instructions and precautions for use

1.When the mouse cursor moves slowly, check whether the battery is low.Suggest timely charging.
2.If the mouse cannot be connected, check whether the power switch at the bottom of the mouse is on and select a correct connection mode or move the USB receiver to another USB port.
3.If you do not use the mouse for a long time, manually turn off the power switch to save power.
4.If you do not use the mouse for a long time, it will automatically enter the sleep mode, move the mouse or press any key to wake up the mouse.
5.Please do not remove or try to repair the product, because doing so may cause damage.

Advanced application

Driver Installation and Usage

1. Go to **www.fmouse.com** in your browser to access the official website. Download the **FMOUSE Futura Setup** mouse driver from the Download Center. Select the driver based on your computer's operating system.
2. After downloading, extract the compressed file. Locate **FMOUSE Futura Setup**, double-click it, and follow the on-screen prompts to install.
3. After installation, launch the driver software. Connect the mouse to your computer via USB to configure its settings.

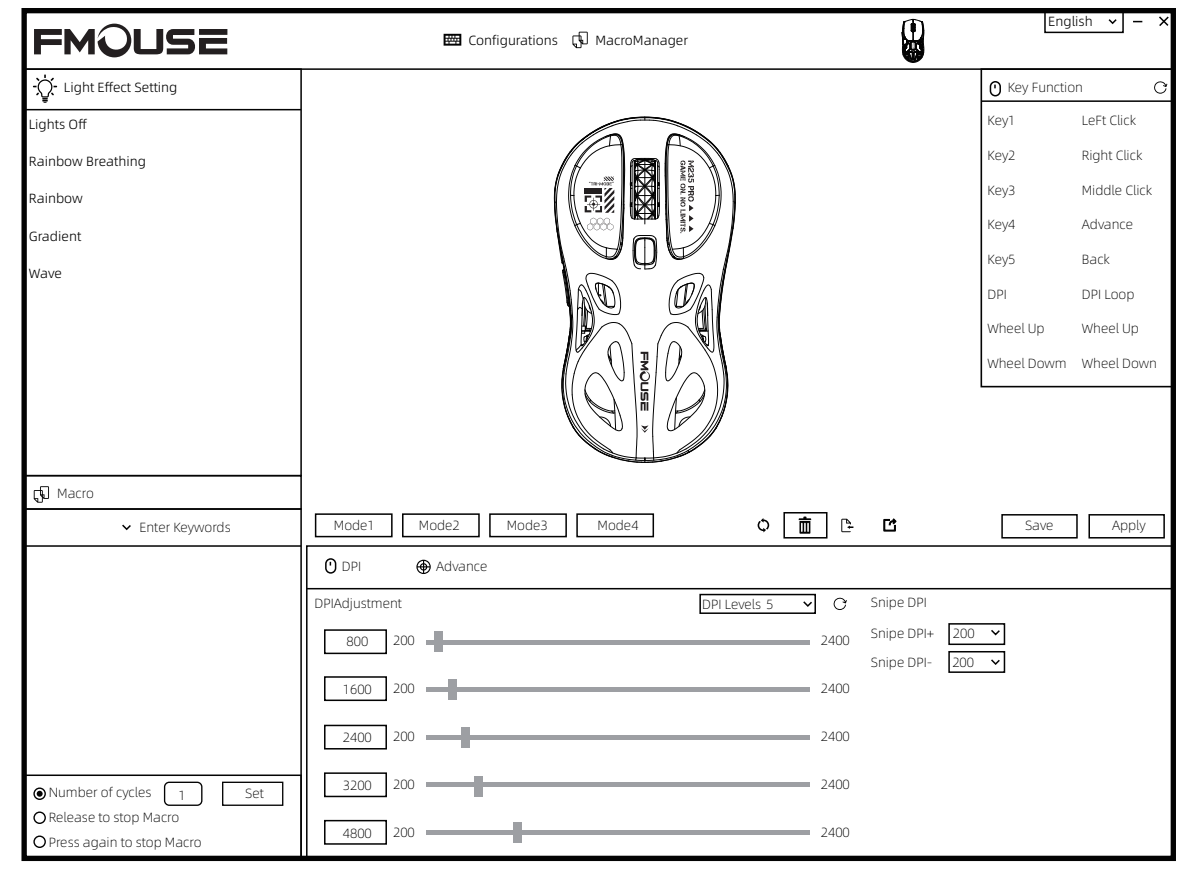

Key1 LeFt Click
Key2 Right Click
Key3 Middle Click
Key4 Advance
Key5 Back
DPI DPI Loop
Wheel Up Wheel Up
Wheel Dowm Wheel Down

Number of cycles 1

DPI Levels 5

800 200 2400
1600 200 2400
2400 200 2400
3200 200 2400
4800 200 2400

Snipe DPI+ 200
Snipe DPI- 200

Product Guide

Read Manual Before Use the Product Battery Usage Warning ⚠ ⚠

- If the battery is replaced improperly, it may cause leakage, explosion, or personal injury.
- Using an incorrect battery type may lead to fire or explosion risks. Please refer to the attached instructions to ensure proper battery installation.
- Mishandling rechargeable batteries may cause fire or chemical burns. Do not disassemble the battery, expose it to conductive materials or liquids, or subject it to temperatures above 54°C (130°F).
- Batteries under extremely low pressure may explode or release flammable liquids or gases.
- Do not use or charge a battery showing signs of leakage, discoloration, deformation, or any other abnormalities.
- Avoid leaving batteries discharged or unused for extended periods.
- Do not short-circuit batteries.
- Your device may include a built-in rechargeable battery that is non-replaceable.
- Battery life varies depending on usage. Discard used batteries according to local laws. If no regulations are available, dispose of the device in an electronics recycling bin.
- Keep batteries out of reach of children

Class 1 Laser Product: This product complies with international standard IEC/EN 60825-1:2014 for Class 1 laser products and meets the requirements of 21 CFR 1040.10, except as described in Laser Notice No. 56 dated May 8, 2019. Maximum power: 716 μW CW; Emission wavelength: 832-865 nm; Operating temperature: 0°C-40°C.
Warning: Failure to follow specified control, adjustment, or operation procedures may result in radiation hazards. Avoid prolonged direct contact with laser apertures on the eyes and/or skin, as it may cause burns.
Class 1 LED Product: This product contains a Class 1 LED. Operating temperature: 0°C to 40°C.
Class 1M Laser Product: This device complies with international standard IEC/EN 60825-1:2014 for Class 1M laser products and meets the requirements of 21 CFR 1040.10, except as described in Laser Notice No. 56 dated May 8, 2019. Emits invisible infrared radiation with a divergent beam of at least +/-2°; Maximum power: 1.4 μW CW; Wavelength range: 832-865 nm; Operating temperature: 0°C to 40°C.
Warning: Viewing laser output at a distance of 100 mm using optical magnifying instruments may cause eye injury.

Service

User Guide - Safe and Proper Use of the Product:

- Do not disassemble or modify the product, except for battery removal and replacement.
- Do not attempt to repair the product, as this may result in radiation hazards.
- Do not point infrared/laser beams at any person’s eyes or reflective surfaces.
- Do not submerge the product in any liquid or expose it to extreme heat or humidity.
- If the product is exposed to temperatures outside the specified range, disconnect it until the temperature stabilizes within the operating range.
- Only use the supplied power adapter. Do not modify the power supply or charge the product during thunderstorms.
- Use this product only with listed/certified ITE computers and accessories.
- This product is not intended for use by children under 14 years old.
- Prolonged repetitive motions may cause nerve, tendon, or muscle injuries in hands, wrists, arms, shoulders, neck, or back. If symptoms like pain, numbness, swelling, or stiffness occur, consult a qualified health professional.
- Under normal and reasonably foreseeable conditions, this product does not pose safety hazards. If the product malfunctions, contact support. For service or repair, return the product to the designated department.
- Any unauthorized modifications will void the user’s rights to operate this device and the product warranty.

Environmental Disposal

♻ Batteries, electronic devices, and electrical equipment should not be disposed of with household waste. Whenever possible, separate them and take them to designated collection points for recycling to prevent potential environmental and health impacts. For more information, contact local authorities or the point of purchase.